

IF WIRELESS CONTROL DOESN'T NOT WORK PROPERLY


This may be due to:

1. The fuse on the Control box has blown.
In this case, the third light from the left will come up.
2. The battery in the air-sprayer is low.
3. The battery in the Wireless control same is low.
4. There is interference from other radio frequency devices.
Change the frequency, for another of 3 more left
Follow the steps of the Instruction Sheet delivered

**in case of need call the SERVICE
"ASSISTENZA Subito"**

Portable +39 346 288 59 88
Office +39 0532 730 586
e-mail: tifone@tifone.com
e-mail: assistenzasubito@tifone.com

IF ELECTROMAGNETIC INTERFERENCE: Channel Change 1.2.3.4.

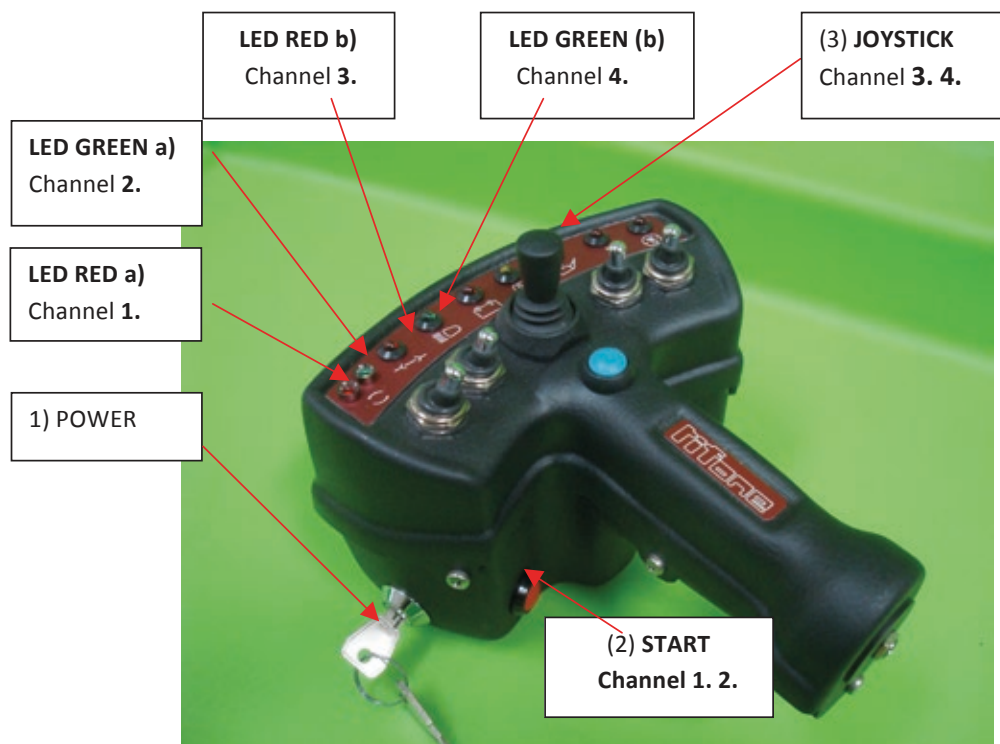

- **TO ACTIVATE CHANNEL 1.**
 1. Turn off (1) **POWER**
 2. Press and hold the red button (2) **START**
 3. Activate (1) **POWER**
 4. After 4 sec. the **RED LED a)** lights : Channel 1. Is activated. Release the red button (2) **START**
- **TO ACTIVATE CHANNEL 2.** *If Channel 1. Is disturbed.*
 1. Turn off (1) **POWER**
 2. Press and hold the red button (2) **START**
 3. Activate (1) **POWER**
 4. After 4 sec. the **GREEN LED a)** lights: Channel 2. is activated. Release the red button (2) **START**
- **TO ACTIVATE CHANNEL 3.** *If also Channel 2. Is disturbed.*
 1. Turn off (1) **POWER**
 2. Press and hold the (3) **JOYSTICK UPWARDS**
 3. Activate (1) **POWER**
 4. After 4 sec. the **RED LED b)** lights: Channel 3 is activated. Release the button (3) **JOYSTICK**
- **TO ACTIVATE CHANNEL 4.** *If also Channel 3. Is disturbed.*
 1. Turn off (1) **POWER**
 2. Press and hold the (3) **JOYSTICK DOWNWARDS**
 5. Activate (1) **POWER**
 3. After 4 sec. the **GREEN LED b)** lights: Channel 4. is activated. Release the button (3) **JOYSTICK**

AFTER CHANGED THE CHANNEL, ACTIVATE (1) POWER: The machine will recognize the last channel set.